



IMPORTANT

Disconnect power before installing fixtures. Read instructions before starting work. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Streamline 6016 Series

FIXTURE INSTALLATION INSTRUCTIONS

Please note: Luminaires are factory assembled for the specified orientation (indirect up or direct down). Mounting screws are always located on the bottom side. Above images are for reference only, refer to specification page for actual orientation and options.

- 1 Remove luminaires, hub assembly, canopy assembly and stem from shipping cartons.
- 2 Remove canopy cover from canopy. Position canopy over j-box, pull supply leads into canopy and fasten canopy to mounting surface independent of j-box with (4) bolts suitable for load application (not supplied).
- 3 Slide canopy cover over stem and thread stem and hub assembly into hanger bracket inside canopy. Connect leads supplied to supply leads with approved wire connector and push splices into j-box. Thread leads through stem and down to hub assembly.
- 4 Working on luminaire remove (10) machine screws on ballast box cover and lens frame cover. Not required for LED models.
- 5 Working inside ballast box select appropriate voltage leads and push leads through wire access hole in back of ballast box. Cap off unused leads and leave in ballast box. Not required for LED models.
- 6 Connect fixture leads and supply leads inside hub with approved wire connectors and push splices into hub.
- 7 Hook fixture at back of ballast box over mounting plate, attached to hub, making sure that no wires are pinched.
- 8 Repeat for second fixture.
- 9 Tighten (2) mounting set screws until fixture is secure against hub. If fixture is misaligned it can be adjusted by loosening mounting plate screws and sliding mounting plate up or down on slotted holes to desired position.
- 10 Caulking may need to be applied between fixture and hub to create watertight seal. Wet location listed units only.
- 11 Loosen adjustment nuts (2) and alignment set screws. Adjust housing to desired angle (+/- 15°) and re-tighten adjustment nuts then set screws. Adjustment hardware located inside ballast box.
- 12 Install designated lamp into lampholder (lamp not supplied). Not required for LED models.
- 13 Re-install ballast box cover and lens frame, making sure there are no obstructions between gasket and frame that will interfere with seal. Tighten machine screws (4 on ballast cover and 6 on lens frame) in a circular pattern to ensure a uniform pressure against gaskets. Tighten to 5 ft/lbs torque to create watertight seal.
- 14 Energize and test as required.

REV 03/17