



IMPORTANT

Disconnect power before installing fixtures. Read instructions before starting work. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN.

Encore ENC1 Wall Arm Mount

INSTALLATION INSTRUCTIONS

This luminaire is designed to fit over a recessed junction box (by others) that has a minimum cubic inch volume capacity of 15. Example: Iberville 54151 (1.5" deep). The power supply or driver is designed to recess into the junction box and consumes 4.5 or 5.0 cubic inches of volume. For ease of installation a 2.125" deep 21 inch cubic capacity J-Box is recommended when possible. Example: Iberville 54171.

1. Remove Luminaire from carton.
2. Remove (4) flat head screws located on the wall arm canopy that hold the fixture to the mounting plate. Disconnect the blue and red LED leads from the lever nut.
3. Connect black, white and green leads from the driver to the supply wires located in the junction box with approved wire nuts (not supplied).
4. The mounting plate is designed to attach to the ears of the junction box with the #8-32 x 1/2" long screws that are provided with the outlet box. There are outer perimeter holes provided on the mounting plate for extra mounting attachment to the wall surface. Tuck the supply connections and wires carefully into the outlet box before attaching the mounting plate. Ensure no wires are pinched.
5. Re-attach the blue and red LED leads to the lever nut. When attaching the housing assembly the lever nut should be flat in order to fit into the wall arm canopy compartment.
6. Attach the housing wall arm assembly to the mounting plate with (4) screws removed in step 2.
7. Energize and test as required.
8. This fixture is supplied with an LED as specified for the project and is self contained.
9. For exterior / wet locations, silicone sealant should be applied around the wall arm canopy to exclude water entrance. Sealant between wall surface and housing wall arm canopy.